


	ITEM NO2	NO. REQ.	DESCRIPTION	BEARING FRAME J				
	1	1	IMPELLER (CI)	953-2342RP				
	1	1	IMPELLER (BRZ)	953-2343RP				
	2	1	CASING $(125\#)(NOW/R)$	953-2336RP				
	2	1	CASING (250#)(NO W/R)	953-2337RP				
	2	1	<u>CASING (125#)(BRZ Ŵ/Ŕ)</u>	953-2338RP				
	2	1	CASING (250#)(BRZ W/R)	953-2339RP				
	3	1(W/R)	WEAR RING (BRZ)	953-1746RP				
	5	1	DOWDY WASHER	951-2579RP				
	6	1	IMPELLER BOLT (SST)	1/2NCX1-1/4LG				
	7	1	IMPELLER KEY (SST)	1/4X1/4X2LG				
	8	1	IMPELLER WASHER	953-829RP				
	9	1	GASKET (CASING)	953-1864RP				
	14	12	CASING BOLT (ST)	3/8NCX7/8LG				
	18	3	PIPE PLUG (BRS)	1/4 NPT				
	26	12	<u>CASING WASHÈR (ŹN)</u>	3/8				
1	29	1	IMPELLER GASKET	953-759RP				
REV	4	1	COVER	953-1757RP				
	20	4	MOTOR BOLT	1/2NCX1-1/4LG				
AW-781	27	4	MOTOR WASHER	1/2				
¥.	35	1	TUBE KIT	951-1547RP				

## FI 'J' Frame Replacement Parts

(for Bearing Frames manufactured after January 2003 - see note below)

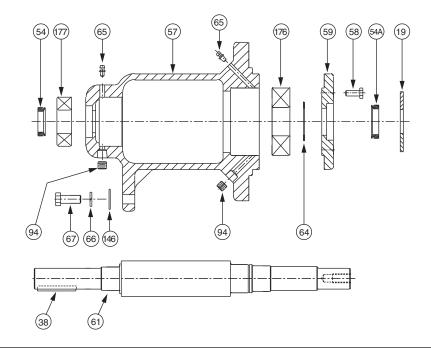


NOTE: Note difference in visual appearance of bearing frames on pages 2 and 3. New frames are a direct replacement for older ones. The part numbers for individual bearings are different from old frames to new frames. If you need help determining which frame you have, please contact tech services at Taco (401-942-8000).

	'J' B	EARING FRAME	STANDARD SEALED BEARINGS	OPTIONAL GREASEABLE BEARINGS	
ITEM NO	NO, REQ.	DESCRIPTION	PART NO.	PART NO.	REMARKS
19	1	FRAME ASSEMBLY (CS)	953-2214RP	953-2217RP	CARBON STEEL SHAFT
19	1	FRAME ASSEMBLY (SS)	953-2222RP	953-2223RP	STAINLESS STEEL SHAFT
57	1	HOUSING	953-2203RP	953-2196RP	
61	1	SHAFT (CS)	953-2198RP	953-2198RP	CARBON STEEL
61	1	SHAFT (SS)	953-2199RP	953-2199RP	STAINLESS STEEL
59	1	END CAP	953-2197RP	953-2197RP	
67	1	BOLT, FOOT SUPPORT	10-234RP	10-234RP	
66	1	LOCKWASHER, FOOT SUPPORT	14-102RP	14-102RP	
146	1	FLAT WASHER, FOOT SUPPORT	14-302RP	14-302RP	
38	1	KEY–SHAFT	13-110RP	13-110RP	
176	1	BALL BEARING, FRONT (THRUST)	953-2215RP	950-963RP	
177	1	BALL BEARING, REAR (RADIAL)	951-5599RP	951-2491RP	
19	1	DEFLECTOR	951-3040RP	951-3040RP	
64	1	RETAINING RING	15-140RP	15-140RP	
58	4	HEX HD BOLT-END CAP	10-207RP	10-207RP	
54	1	V RING SEAL-REAR	953-1575-3RP	953-1575-3RP	
54A	1	V RING SEAL-FRONT	953-1575-3RP	953-1575-3RP	
65 94	2	GREASE FITTING		15-203RP	
94	2	PIPE PLUG		16-140RP	


AW-717 REV D

### FI 'J' Frame Replacement Parts

#### (for Bearing Frames manufactured prior to February 2003 - see note below)

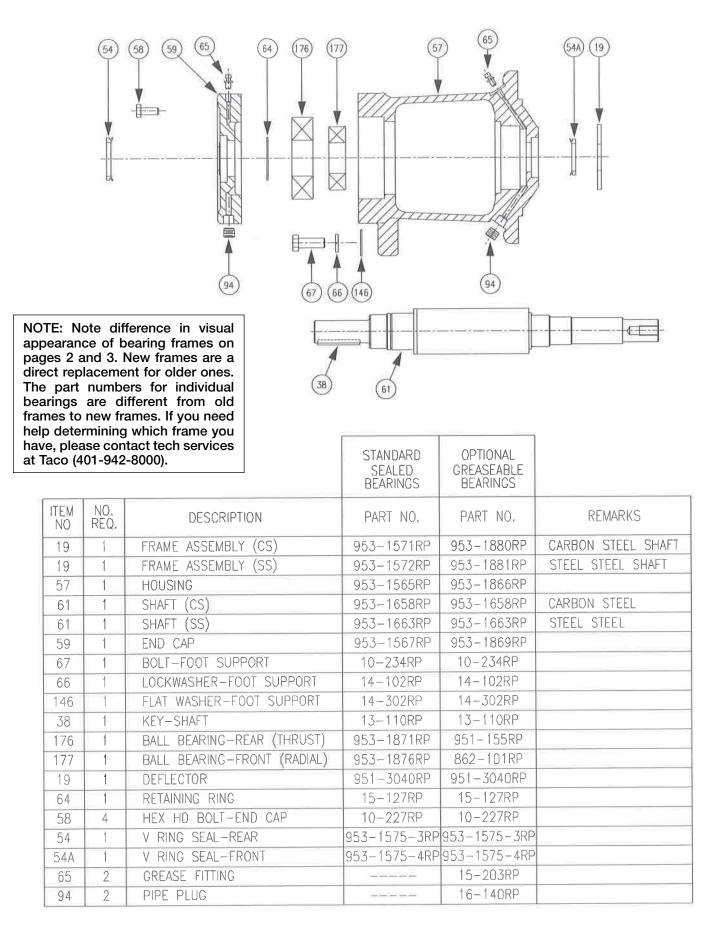


# **FI Series Seal Replacement Parts (EPT)**

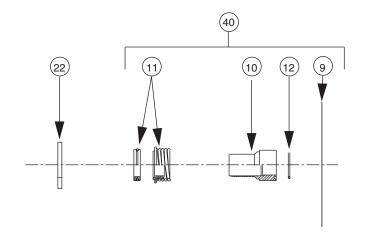

			1206, 1506, 2506			1206, 1506, 2506				
			1207, 1507 2007	2507, 3007, 4075, 4007, 5007		1207, 1507 2007	2507, 3007, 4075, 4007, 5007			
				2508			2508			
			1209C 2009C 2509C	1509, 2009, 2009C, 2509, 2509C, 3009, 4009, 5009,		1209C 2009C 2509C	1509, 2009, 2009C, 2509, 2509C, 3009, 4009, 5009,			
				5095, 6009			5095, 6009			
			2510C	2510		25100	2510			
				1511, 2511, 3011,			1511, 2511, 3011,			
				4011, 4011C 5011, 6011			4011, 4011C 5011, 6011			
				2513, 3013 4013	5013, 6013		2513, 3013 4013	5013, 6013		
ITEM	NO,			BEARING FRAME			BEARING FRAME			
	REQ,	DESCRIPTION	Н	J		Н				
				HANICAL DESIGN	(125#)	MECHANICAL DESIGN (250#)				
9	1	GASKET (CASING)	SEE PAGE 1	SEE PAGE 1	SEE PAGE 1	SEE PAGE 1	SEE PAGE 1	SEE PAGE 1		
10	1	SLEEVE (SS)	953-1118RP	953-1170RP	<u>953–1172RP</u>	<u>953–1892RP</u>	953-1891RP	953-1890RP		
10	1	SLEEVE (BRZ) SEAL (TYPE B)	953-1119RP 951-3157RP	<u>953-1171RP</u> 951-3158RP	953-1173RP 951-2966RP	<u>953-1861RP</u> 951-3766RP	<u>953–1887RP</u> 951–5158RP	953-1888RP 951-5151RP		
11	1	SEAL (TYPE D)	951-3157RP 951-3159RP	951-3156RP 951-3160RP	951-2967RP	951-3781RP	951-5158RP	951-5152RP		
11	1	SEAL (TYPE E)	951–3161RP	951-3162RP	951-2968RP	951-3782RP	951-5160RP	951–5153RP		
12	1	SLEEVE "O"-RING	592-525RP	951-3042RP	951-5277RP	592-525RP	951-3042RP	951-5277RP		
22	1	DEFLECTOR	900-043RP	951-3040RP	951-3065RP	900-043RP	951-3040RP	951-3065RP		
40	1	SEAL KIT (TYPE B) SS	953-1549-1RP	953-1549-4RP	953-1549-14RP	953-1549-7RP	953-1549-10RP	953-1549-17RP		
40	1	SEAL KIT (TYPE B) BRZ	953-1549-1BRP	953-1549-4BRP	953-1549-14BRP		953-1549-10BRP	953-1549-17BRP		
40	1	SEAL KIT (TYPE D) SS	953-1549-2RP	953-1549-5RP	953-1549-15RP	953-1549-8RP	953-1549-11RP	953-1549-18RP		
40	1		953-1549-2BRP		953-1549-15BRP		953-1549-11BRP	953-1549-18BRP		
40	1	SEAL KIT (TYPE E) SS	953-1549-3RP	953-1549-6RP	953-1549-16RP	953-1549-9RP	953-1549-12RP	953-1549-19RP		
40	1	SEAL KIT (TYPE E) BRZ	953-1549-3BRP	953-1549-6BRP	953-1549-16BRP	<u>  953-1549-98RP</u>	953-1549-12BRP	<u> 953-1549-19BRP </u>		

## **Motor Replacement Parts**

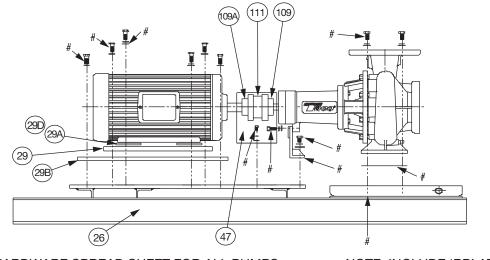

# SEE FI BASE HARDWARE SPREAD S	SHEET FOR ALL PUMPS
---------------------------------	---------------------

NOTE: INCLUDE 'RP' AT END OF P/N

		1 NO,	DESCRIPTION	FI 4009 MOTOR FRAMES (NEMA STD.) "T"										
	NU.	REQ.		56	143T	145T	182T	184T	213T	215T	254T	256T	284T	286T
REV A	47	1	COUPLER GUARD	-	-	-	951 - 3574	951-3574	951-3574	951- <i>3</i> 574	951-3574	951 - 3574	951-3574	-
	109	1	PUMP COUPLER HALF	-	-	-	953-2437	953-2437	953-2437	953-2437	953-2449	953-2450	953-2450	-
	109A	1	MTR、COUPLER HALF	-	-				953-2437					-
	111	1	COUPLER INSERT	-	-	-	953-2430	953-2430	953-2430	953-2430	953-2438	953-2446	953-2446	-
	*	1	OSHA COUPLER GUARD	-	-	-	953-1915	953-1915	953-1915	953-1915	953-1915	953-1915	953-1915	-
	26	1	BASE	-	-	-	953-2514	953-2514	953-2514	953-2514	953-2514	953-2514	953-2514	-
V-8	29	2	SPACER (1ST) MOTOR	_	_	-	951-5210	951-5210	951-5204	951-5204	-	_	-	_
₹ 29	29A	4	SPACER RD (1ST) MOTOR	_	_	_	_	_	_	_	953-2228	953-2228	-	_



**TACO, INC.**, 1160 Cranston Street, Cranston, RI 02920 Telephone: (401) 942-8000 FAX: (401) 942-2360. **TACO (Canada), Ltd.**, 8450 Lawson Road, Unit #3, Milton, Ontario L9T 0J8. Telephone: 905/564-9422. FAX: 905/564-9436.

Printed in USA Copyright 2013 TACO, Inc.

Visit our web site at: http://www.taco-hvac.com